



| EN | OPERATING MANUAL



6WN1 - 10WN1 - 15WN2 - 20WN2 - 40WN3
7WL1 - 10WL2 - 15WL2 - 20WL3

polarik®

The premium quality monoblock unit



Please read this manual before you install and operate the monoblock unit.

After reading the operating manual, keep it in a safe place for future reference.

Copyright© by GOVI GmbH **2021**.

The reproduction and copying of this document, in part or in whole, are prohibited. We reserve the right to make technical changes in the course of further development.

GOVI GmbH

Max-Planck-Str. 5

53842 Troisdorf (Germany))

Tel: +49 2241 92 29 460

Fax: +49 2241 92 30 390

e-mail: info@govi-gmbh.de

www.govi-gmbh.de

Contents

1	General points.....	6
1.1	Intended use.....	6
1.2	Conditions of use.....	6
1.3	Personnel	7
1.4	Spare parts.....	7
1.5	Environmental regulations	7
1.6	Disposal of the unit	8
2	Safety.....	9
2.1	Safety messages and safety-alert symbols.....	9
2.2	Other terms and symbols	9
2.3	Safety and hazard precautions.....	9
2.4	Refrigerant-handling precautions	12
2.5	First aid.....	13
3	Technical data	14
3.1	Monoblock units 6WN1 10 WN1 and 7 WL1	15
3.2	Monoblock units 15 WN2, 20 WN2, 10 WL2, 15 WL2	18
3.3	Monoblock units 40 WN3, 20 WL3	21
4	Packing, transport and storage	24
4.1	Transport	25
4.2	Storage	25
5	System description.....	26

6	Installation	29
6.1	Conditions for installation	29
6.2	Installation of the units	30
6.1.1	General preparation	30
6.1.2	Hanging installation of the unit (removable top)	31
6.1.3	Embedded installation of the unit (installation opening)	33
6.1.4	Final tasks	35
6.3	Installation of accessories	36
7	Operating elements	37
7.1	LED indicators	38
7.2	Function keys	39
8	Commissioning	40
9	Operation	42
9.1	Switching the monoblock unit on and off	43
9.2	Unblocking the function keys	43
9.3	Setting the nominal temperature	43
9.4	Switching the lamp on and off	44
9.5	Manual defrost	44
10	Maintenance	45
10.1	Cleaning procedure	46
10.1.1	Cleaning of components inside the cold room	46
10.1.2	Cleaning of external components	47
11	Faults	48

11.1	Troubleshooting	48
11.2	Error codes	50
12	Appendix.....	51
12.1	Wiring diagrams.....	51

1

General points

GOVI provides this manual for information purposes only. The information supplied in this manual should at no time be regarded as all-inclusive or covering all contingencies. For further information, please contact your GOVI distributor.

To ensure the durability of GOVI products, please follow the instructions in this manual.

1.1

Intended use

This monoblock unit is designed for use in cold rooms that are not exposed to any explosion or fire hazard. In order to perform its function, the monoblock unit is attached to the wall of the cold room by means of mechanical fastening systems.

- The monoblock unit is not designed for operation in locations classed as AP.PE EEx (explosion hazard).
- The monoblock unit is not designed for use in places exposed to fire hazard.
- The monoblock unit is designed for indoor use only.

The monoblock unit is not intended for any use other than as described above. All other usage shall be considered improper, and is either prohibited or requires the approval/permission of the manufacturer.

Unauthorised modification or manipulation of the monoblock unit will immediately void GOVI's warranty, obligations, unless GOVI has granted express written consent in advance. GOVI shall accept no liability for personal injury or material damage resulting from unauthorised modification.

"Intended purpose" also includes compliance with specified maintenance and repair-work requirements. *See section 10 "Maintenance" (page 45).*

1.2

Conditions of use

Ensure that the cold room in which you intend to install the monoblock unit is properly ventilated and fitted with an extraction system. Ensure also that you leave sufficient space for proper maintenance access.

Do not expose the monoblock unit to direct sunlight.

Ensure proper air circulation when placing items inside the refrigerated unit, and be careful not to block the refrigeration-unit evaporator.
Do not place heat-emitting items in the refrigerated unit.

1.3

Personnel

All persons engaged to work on the monoblock unit as described in this operating manual must be suitably trained and qualified, and able to assess the work to be carried out and identify possible hazards.

1.4

Spare parts

Use only original spare parts or parts approved by GOVI. Please note that spare parts and accessories not supplied by GOVI are neither tested nor approved. GOVI can accept no responsibility or warranty liability for loss or damage arising from the use of non-original spare parts.

1.5

Environmental regulations

GOVI supplies the monoblock unit ready-filled with refrigerant.

If you detect any fault in the refrigerant circuit, or signs of leakage from the monoblock unit, have the device examined and repaired by a qualified specialist.

DO NOT allow refrigerant to escape into the open air.

Please read the safety instructions and hazard warnings in [section 2.3 "Safety and hazard precautions" \(page 9\)](#), as well as the manufacturer's data sheet for the refrigerant concerned. The corresponding data sheets can be downloaded from the GOVI website.

Dispose of defective refrigeration units and drained-off refrigerant in accordance with applicable environmental regulations.

1.6

Disposal of the unit

**WARNING**

Incorrect dismantling of the monoblock unit may result in personal-injury hazard or danger to the environment.

Engage only trained and qualified specialists to disassemble the monoblock unit.

Take special care when handling the refrigerant.

The customer is responsible for proper disposal of the monoblock unit.

When you eventually scrap the monoblock unit, follow the corresponding local waste-disposal regulations, and engage, if necessary, the services of a specialist organisation.

Designation	Material
Structure	sheet steel, ferrous materials
Condenser, evaporator	aluminium, copper
Electrical components	copper, PVC, miscellaneous materials
Compressor	steel, copper and other materials
	compressor oil
Refrigerant (standard)	see section 3 "Technical data" (page 14).
Refrigerant quantity	see section 3 "Technical specifications" (page 14).
Coating	epoxide compound

Tab. 1: List of materials

2 Safety

2.1 Safety messages and safety-alert symbols



DANGER

Failure to observe these instructions is likely to result in irreversible, or even fatal, injury.



WARNING

Failure to observe these instructions may result in irreversible, or even fatal, injury.



CAUTION

Failure to observe these instructions may result in personal injury and/or damage to equipment or the environment.

2.2 Other terms and symbols

“Note” texts do not contain any safety-related items.



Items marked “note” contain helpful tips, as well as additional information.

2.3 Safety and hazard precautions



WARNING

Danger of fatal electric shock

Before starting work of any kind on the monoblock unit, disconnect it from the power supply and ensure that it cannot be reactivated by accident.

Take suitable steps to prevent the monoblock unit from being switched back on while work is in progress.

**WARNING**

Danger of fatal electric shock

Strictly observe the following safety rules when working on the monoblock unit's electrical system:

- **Switch OFF.**
- **Block the switch to prevent accidental reactivation.**
- **Disconnect the power supply.**
- **Connect to earth (ground) and short-circuit.**
- **Cover or isolate all nearby live components.**

Electrical connection of the monoblock unit must be carried out by a qualified electrician.

**WARNING**

Toxic gas hazard

The refrigerant contained in the monoblock unit may produce toxic fumes if exposed to a naked flame or an electrical spark. These fumes are severe respiratory irritants, potentially capable of causing death.

The refrigerant tends to displace air, causing oxygen depletion, which may result in death by asphyxiation.

Take special care when working on the monoblock unit, particularly in an enclosed or confined space with a limited supply of fresh air.

**WARNING**

Fire and explosion hazard from flammable materials.

DO NOT expose to naked flames, electrical sparks or other sources of ignition.

NO SMOKING Observe fire/explosion-prevention measures.



WARNING

Danger arising from unauthorised modification

DO NOT drill any extra holes into the monoblock unit, as this may damage important components. Damage to electrical wiring or refrigerant conduits may cause a fire.



WARNING

Risk of damage to health from leaking refrigerant

Liquid refrigerant or fumes may leak out during maintenance or repair work involving the refrigerant circuit. These emissions can pose a threat to human health and the environment.

Always use suitable personal protective equipment (including goggles, respiratory mask and protective gloves) if leaking refrigerant is present.



CAUTION

Burn hazard

Certain parts of the monoblock unit (e.g. the condenser, evaporator and tubes) may still be hot after operation.

Let them cool down sufficiently before starting work on the monoblock unit.



CAUTION

Risk of long-term damage to the environment

The operating materials (refrigerant and compressor oil) are NOT biodegradable. Observe the safety data sheets or operating instructions supplied with the materials used.

Observe the corresponding local environmental regulations when disposing of items that have been contaminated with operating materials.

**CAUTION**

Risk of injury from sharp edges and rotating parts.

Keep your distance from rotating fan blades, and beware of the sharp sheet-metal edges under the main cover.

Contact with these sharp edges, especially the fan blades, can result in injury.

2.4**Refrigerant-handling precautions**

Although the refrigerants used are classed as “safe”, you should still observe certain precautions during the handling, installation and maintenance of the monoblock unit.

Liquid refrigerants evaporate rapidly when released into the atmosphere, and quickly ice up everything that they touch.

Skin contact can lead to severe, frostbite-like injury.

2.5

First aid

In the event of eye contact with refrigerant or compressor oil, rinse the affected eye(s) immediately with abundant clean water (for at least **15** minutes), and seek medical attention.

In the event of skin burn, protect the affected area(s) from further contact with the refrigerant, and take the following immediate measures:

- Remove refrigerant-contaminated clothing and footwear.
- Thoroughly rinse off the refrigerant with abundant lukewarm water.
- DO NOT apply heat (e.g. by rubbing or with a hot-water bottle).
- Seek medical attention immediately. While you are waiting for help to arrive, cover the affected area as loosely as possible with a large sterile dressing.

In the event of inhalation of refrigerant, seek medical attention immediately and bring the injured person into the fresh air. Administer artificial respiration if required.

3**Technical data**

The monoblock unit consists of a self-supporting chassis made of galvanized sheet metal and a front cover made of coated ABS.

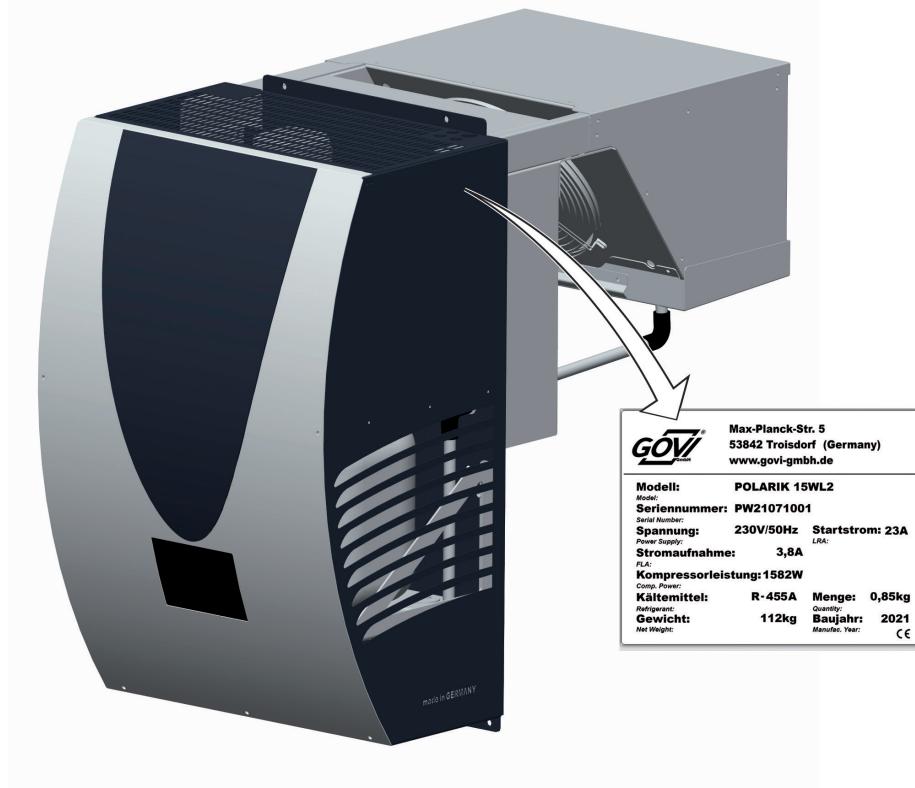


Fig. 1: Nameplate

The nameplate carries the serial number of the monoblock unit, together with other important technical data.

The nameplate is on the right-hand side of the main cover, near the electrical connection point.

Always have the serial number of the monoblock unit to hand when contacting us, as this will ensure the fast and smooth processing of your enquiry.

3.1 Monoblock units 6WN1, 10 WN1 and 7 WL1

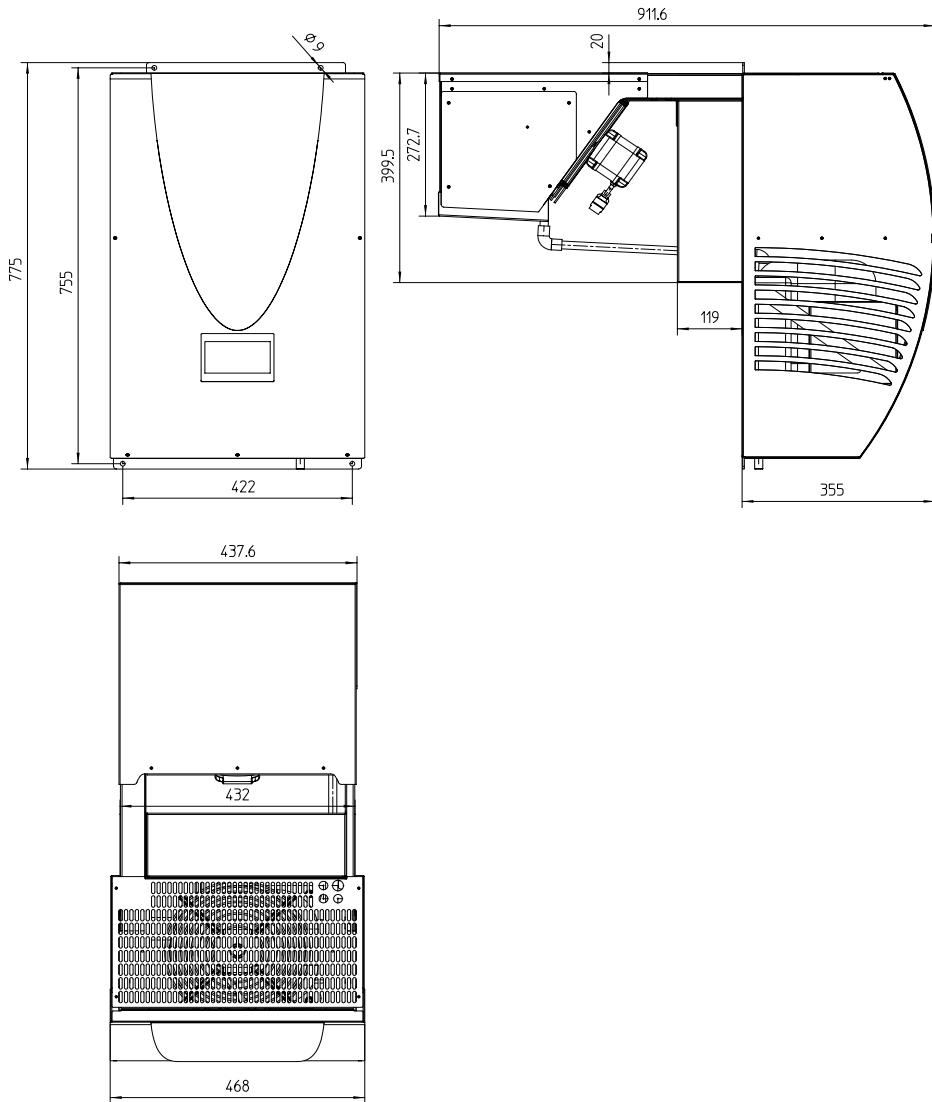


Fig. 2: Dimensions of the 6 WN1, 10 WN1 and 7 WL1 units

Designation	Unit	6 WN1	10 WN1	7 WL1
Temperature range of cold room	°C	MT +10 / -5		LT -15 / -25
Max. spatial volume of cold room	m ³	6	10	7
Power supply	V		1~230	
Frequency	Hz		50	
Refrigeration capacity	W	1140 (at ambient temperature of 32°C and cold room temperature of 2°C)	1902 (at ambient temperature of 32°C and cold room temperature of 2°C)	1056 (at ambient temperature of 32°C and cold room temperature of -18°C)
Heat output into surrounding area	W	1645	2729	1826
Compressor power consumption	W	505	827	770
EER ₁ (energy efficiency rating, based on the ratio of power consumption to cooling capacity)	-	2,36	2,27	1,21
Current consumption (LRA)	A	19	29,5	29,5
Current consumption (FLA)	A	4,5	5,7	4
Defrost mode	-		Electric	
Evaporator-fan airflow	m ³ /h		750	
Condenser-fan airflow	m ³ /h		750	
Protection rating	IP		34	
Max. ambient temperature	°C	43		35
Refrigerant	-		R-455A	
GWP (global warming potential)	-		148	

Tab. 2: Technical data

Designation	Unit	6 WN1	10 WN1	7 WL1
CO ₂ equivalent	t CO ₂	0,66	0,66	1,25
Refrigerant quantity	g	450	450	450
Length of mains cable	m		2	
Evaporator-fan throw distance	m		3,5	
Dimensions	-	<i>See fig. 2: "Dimensions of 6 WN1, 10 WN1 and 7 WL1" page 15)</i>		
Weight	kg	60	68	69
Colour	RAL	9010 / 7024		

Tab. 2: Technical data

3.2

Monoblock units 15 WN2, 20 WN2, 10 WL2 and 15 WL2

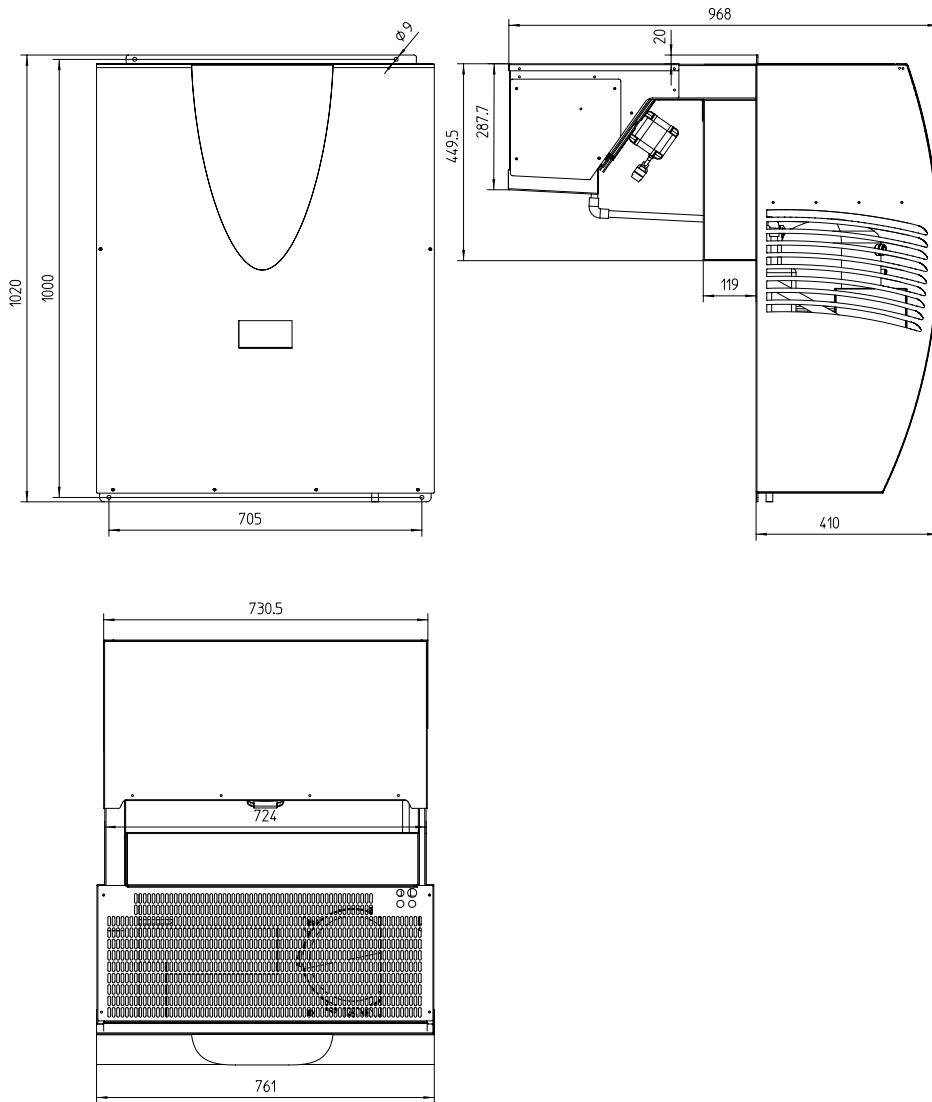


Fig. 3: Dimensions of 15 WN2, 20 WN2, 10 WL2 and 15 WL2

Designation	Unit	15 WN2	20 WN2	10 WL2	15 WL2		
Temperature range of cold room	°C	MT +10 / -5		LT -15 / -25			
Max. spatial volume of cold room	m ³	15	20	10	15		
Power supply	V	1~230	1~230	1~230	3~400		
Frequency	Hz	50					
Cooling capacity	W	2510 (at ambient temperature of 32°C and cold room temperature of 2°C)	2752 (at ambient temperature of 32°C and cold room temperature of 2°C)	1418 (at ambient temperature of 32°C and cold room temperature of -18°C)	2231 (at ambient temperature of 32°C and cold room temperature of -18°C)		
Heat output into surrounding area	W	3506	3857	1428	3577		
Compressor power consumption	W	996	1105	1010	1346		
EER ₁ (energy efficiency rating, based on the ratio of power consumption to cooling capacity)	-	2,52	2,49	1,4	1,65		
Current consumption (LRA)	A	33	42,2	40	31		
Current consumption (FLA)	A	5,1	7,5	5,9	3,8		
Defrosting mode	-	Hot gas					
Evaporator-fan airflow	m ³ /h	1100					
Condenser-fan airflow	m ³ /h	1100					
Protection rating	IP	34					
Max. ambient temperature	°C	43		35			
Refrigerant	-	R-455A					
Tab. 3: Technical data							

Designation	Unit	15 WN2	20 WN2	10 WL2	15 WL2
GWP (global warming potential)	-	148			
CO ₂ equivalent	t CO ₂	1,18	1,25	1,18	1,25
Refrigerant quantity	g	800	850	800	850
Length of mains cable	m	2			
Evaporator-fan throw distance	m	6			
Dimensions	-	<i>See fig. 3: Dimensions of 15 WN2, 20 WN2, 10 WL2 and 15 WL2" (page 18)</i>			
Weight	kg	104	106	100	112
Colour	RAL	9010 / 7024			

Tab. 3: Technical data

3.3 Monoblock units 40 WN3 and 20 WL3

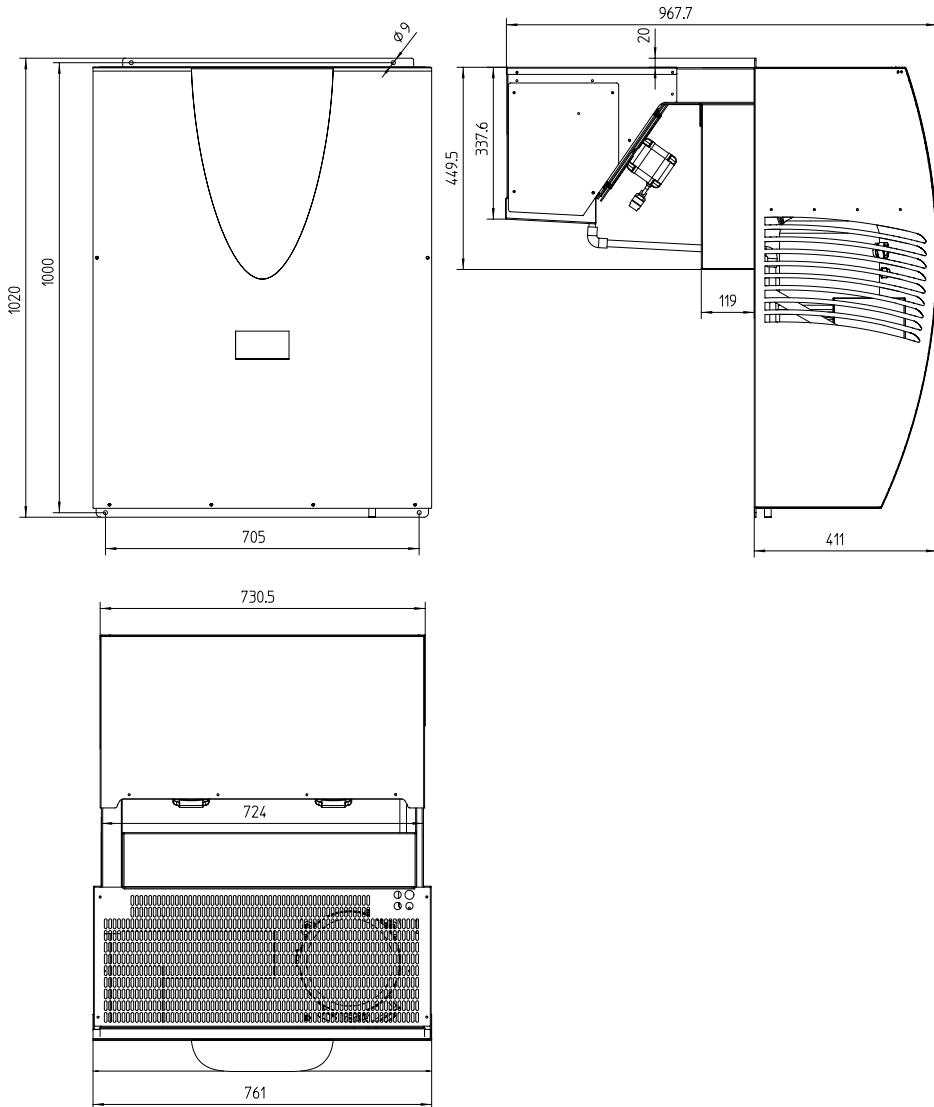


Fig. 4: Dimensions of 40 WN3 and 20 WL3

Designation	Unit	40 WN3	20 WL3
Temperature range of cold room	°C	MT+10 / -5	LT -15 / -25
Max. spatial volume of cold room	m ³	40	20
Power supply	V	3~400	
Frequency	Hz	50	
Cooling capacity	W	5301 (at ambient temperature of 32°C and cold room temperature of 2°C)	3223 (at ambient temperature of 32°C and cold room temperature of -18°C)
Heat output into surrounding area	W	7093	5114
Compressor power consumption	W	1792	1891
EER ₁ (energy efficiency rating, based on the ratio of power consumption to cooling capacity)	-	2,95	1,70
Current consumption (LRA)	A	30	60
Current consumption (FLA)	A	10	6,5
Defrosting mode	-	Hot gas	
Evaporator-fan airflow	m ³ /h	2 x 1100	
Condenser-fan airflow	m ³ /h	2 x 1100	
Protection rating	IP	34	
Max. ambient temperature	°C	43	35
Refrigerant	-	R-455A	
GWP (global warming potential)	-	148	

Tab. 4: Technical data

Designation	Unit	40 WN3	20 WL3
CO ₂ equivalent	t CO ₂	1,77	1,85
Refrigerant quantity	g	1200	1250
Length of mains cable	m		2
Evaporator-fan throw distance	m		8
Dimensions	-	<i>See fig. 4: "Dimensions of 40 WN3 and 20 WL3" (page 21)</i>	
Weight	kg	105	106
Colour	RAL	9010 / 724	

Tab. 4: Technical data

4

Packing, transport and storage

The monoblock unit is secured in a pallet-mounted packing case for safe transportation.



CAUTION

Refrigerant leaks from damaged equipment can cause skin injuries and material damage.

In the event of severe external damage to the packing material and/or the monoblock unit itself, contact your local GOVI representative immediately.

DO NOT try to install the monoblock unit.

DO NOT attempt to start it up.

1. Place the pallet on a flat surface. Examine the packing material and monoblock unit for transport damage.
2. Inform the carrier of any damage detected.
3. Take photographs of the damage, and add a corresponding note to the transport documents.
4. Check accompanying items for completeness.
5. Before disposing of the packing material, check for loose items forming part of the delivery.

4.1 Transport



CAUTION

Risk of equipment damage

The monoblock unit must be transported in an upright position.

Leave the monoblock unit standing upright for at least six hours before starting it up for the first time.

- Use only suitable lifting gear and transport equipment to raise and move the monoblock unit. For details of its weight, see “**3 Technical data**” (page **14**).
- Lift the monoblock unit as described in “**6 Installation**” (page **29**).

4.2 Storage

Please observe the following points when placing the monoblock unit into storage:

- The monoblock unit must be placed in a horizontal position for storage.
- The storage location must be dry and dust-free.
- The storage temperature must not exceed **60°C**.
- DO NOT store the monoblock unit near corrosive substances of any kind.
- Use a storage location away from direct sunlight.

5 System description

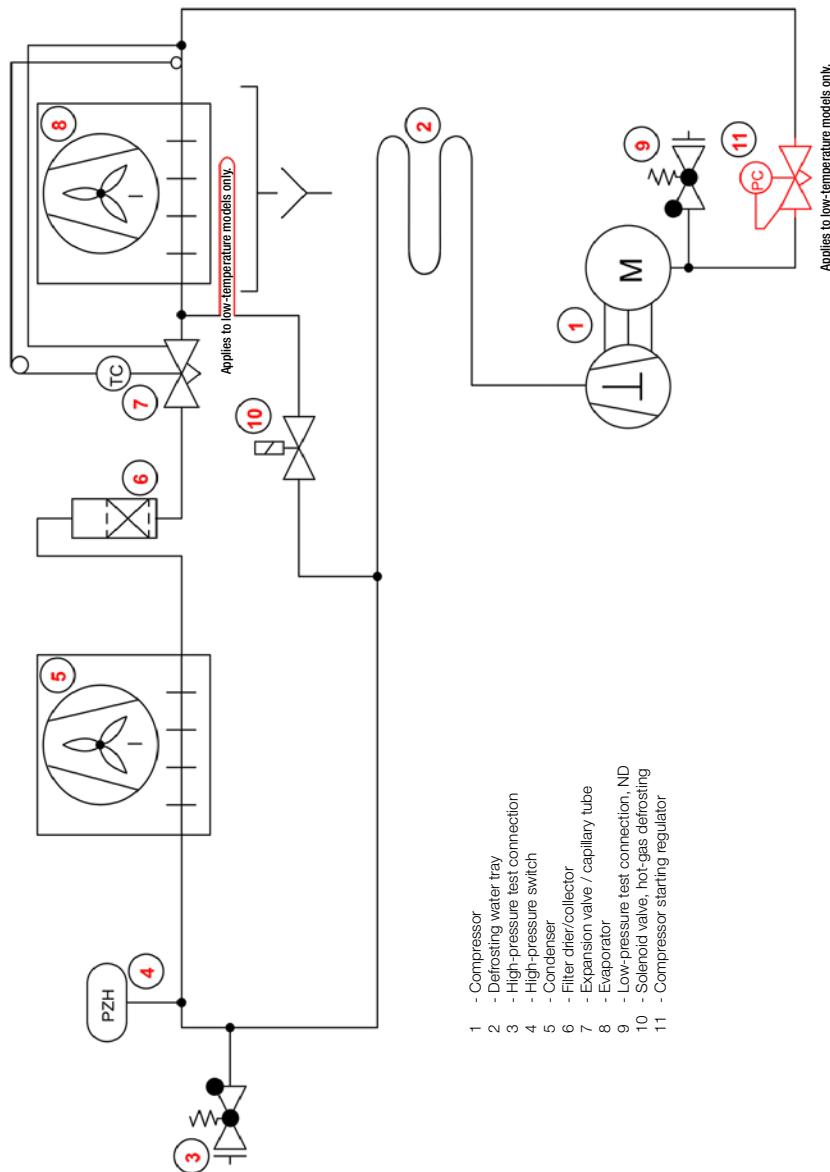


Fig. 5: Flowchart

The compressor **1** draws the gaseous vaporised refrigerant from the evaporator **8** and compresses it.

This makes the refrigerant temperature rise abruptly.


The vaporised refrigerant is transported from the compressor **1** to the condenser **5**.

In the condenser **5**, the refrigerant gas is cooled by ambient air, causing it to liquefy.

The heat removed from the cold room is then released into the atmosphere. The liquid refrigerant is then collected in the drier/collector **6** and stripped of moisture and impurities.

The throttle valve **7** regulates the flow quantity of liquid refrigerant for the evaporator **8**.

The evaporator **8** is inside the cold room, with the condenser **5** outside.

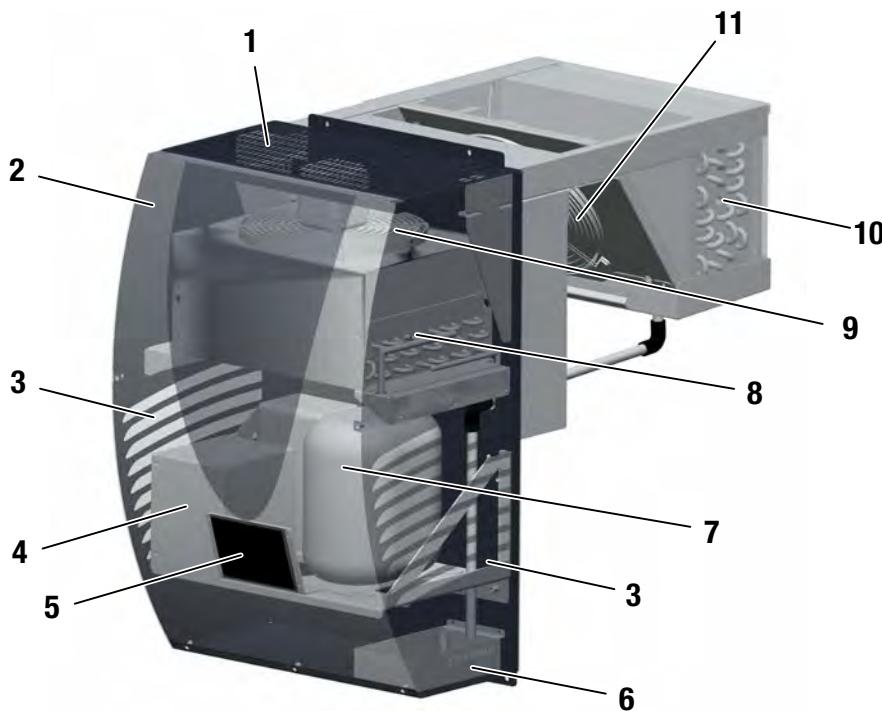

1 Air outlet	5 Control unit	9 Condenser fan
2 Main cover	6 Condensate tray	10 Evaporator
3 Air intake	7 Compressor	11 Evaporator fan
4 Control system	8 Condenser	

Fig. 6: Overview of the monoblock unit

The main cover **2** covers the components outside the cold room. These include the control unit, the compressor, the condenser and the condenser fan, along with the condensate tray.

The evaporator **5** of the monoblock unit is inside the cold room.



Keep the air intakes **3** and outlet **1** clear at all times. They must not be covered or obstructed.

6 Installation

6.1 Installation requirements

1. Read through the operating manual carefully in order to carry out installation correctly.
2. Verify that the monoblock unit has been delivered according to your order specifications, and that it is in good condition with no visible signs of damage.
3. Check to ensure that none of the necessary tools and additional items are missing, and that they are in proper operating condition.
4. Ensure also that the supporting elements of the monoblock unit are strong enough to support its weight.
5. Ensure that the crane hoist and lifting gear are of the right size to support the load of the monoblock unit. For details of its weight, see section 3 “Technical data” (page 14).
6. NB: Do not connect the power supply of the monoblock unit before first completing the installation of the unit and its accessories.
7. Do not allow the inside walls of the cold room to be soiled or damaged by the swarf and other fragments that result from cutting and drilling of the sheet metal.

6.2 Installation of the units

6.1.1 General preparation


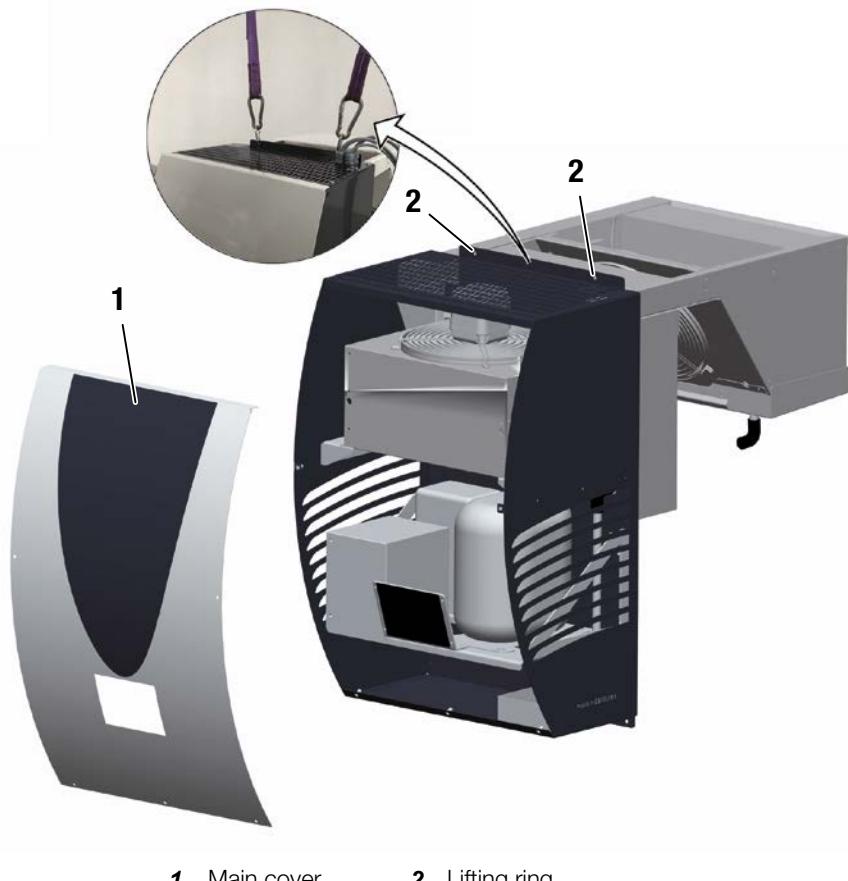


Fig. 7: Installation, preparation

1. Place the cold room and monoblock unit on a dry, clean level surface.

2. Make sure that the cold room is level.
3. Ensure that the mating surface between the cold room wall and monoblock unit is level and free of impurities.
4. Remove all loose items from the installation area.
5. Prepare all the required installation tools and other equipment and keep them to hand.
6. Undo the five screws and remove the main cover **1**.
7. Keep the monoblock unit upright at all times during installation, including lifting operations.
8. Attach suitable lifting gear at the lifting rings **2**.


6.1.2 Hanging installation of the unit (removable top)

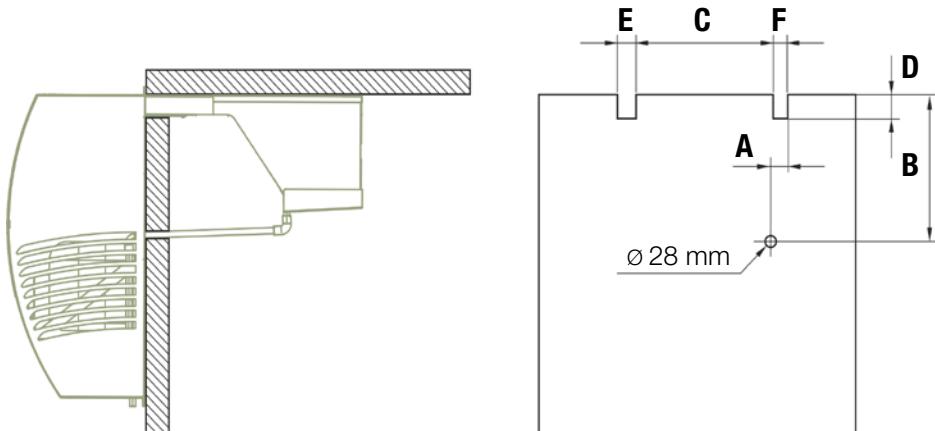

<i>Model</i>	<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>
WN1 / WL1		364 mm	362 mm	75 mm		
WN2 / WL2	41 mm	378 mm			54 mm	
WN3 / WL3		430 mm	655 mm	105 mm		21 mm

Fig. 8: Installation with wall cutout for fitting of unit

1. Remove the top of the cold room.
2. Carry out preparatory work as described in **6.1.1 “General preparation”** (page **30**).
3. Make the corresponding cutouts in the cold room wall. See fig. **9**: “Installation with wall cutout for fitting of unit” (page **31**).

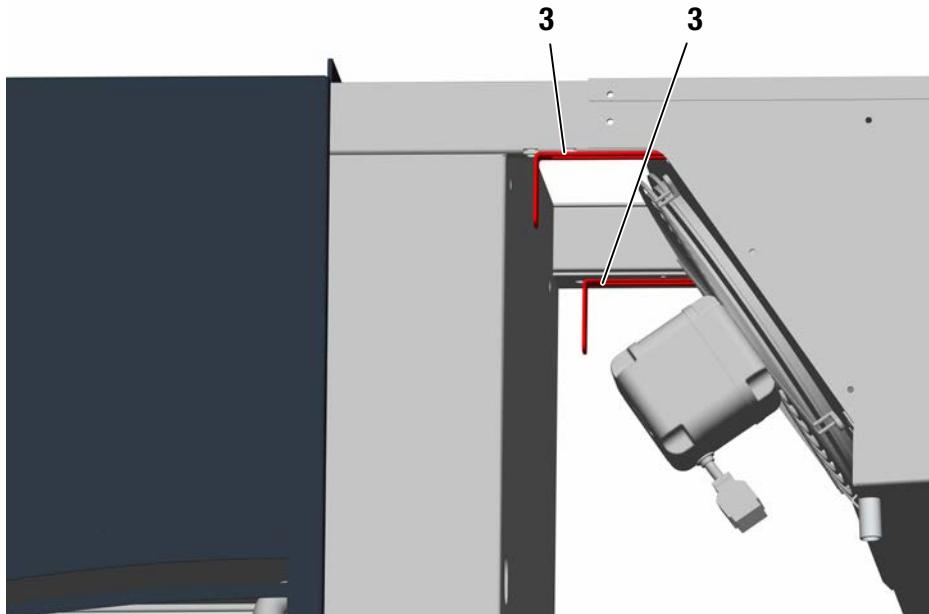


3 Angle bracket

Fig. 9: Installation with suspended attachment of unit

4. Use a hoist and lifting gear to position the monoblock unit in the cutouts in the cold room wall.
5. Slide the two brackets **3** onto the cold room wall on either side of the monoblock unit. Tighten both pairs of screws.
6. Detach the lifting gear.

7. Seal the cold room by applying silicone sealant to the gap between the monoblock unit and cold room.
8. Carry out final tasks as described in **6.1.4 “Final tasks”** (page **35**).

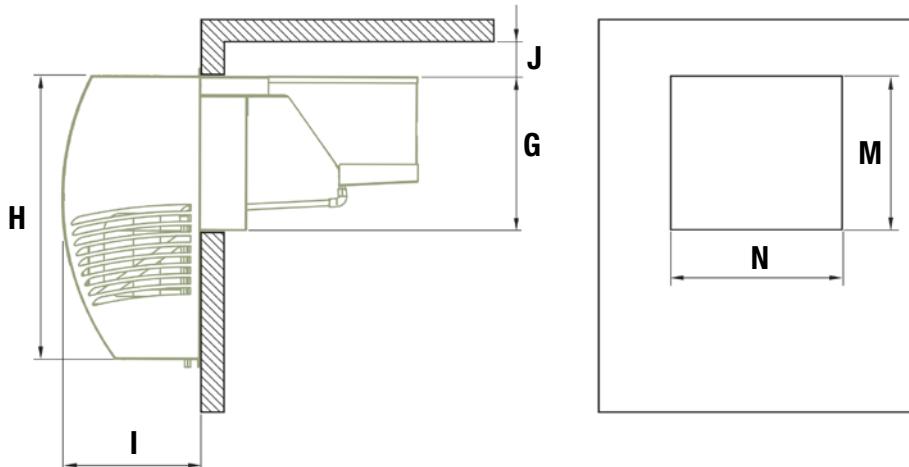


Model	G	H	I	J	M	N
WN1 / WL1	438 mm	755 mm	355 mm		405 mm	443 mm
WN2 / WL2	731 mm	1020 mm	410 mm	100 mm	455 mm	736 mm
WN3 / WL3						

Fig. 10: Embedded installation by insertion of unit into opening


6.1.3 Embedded installation of the unit (installation opening)

1. Make the corresponding cutouts in the cold room wall. [See fig. 10 “Embedded installation by insertion of unit into opening” \(page 33\).](#)
2. Use a hoist and lifting gear to position the monoblock unit in the installation opening in the cold room wall.

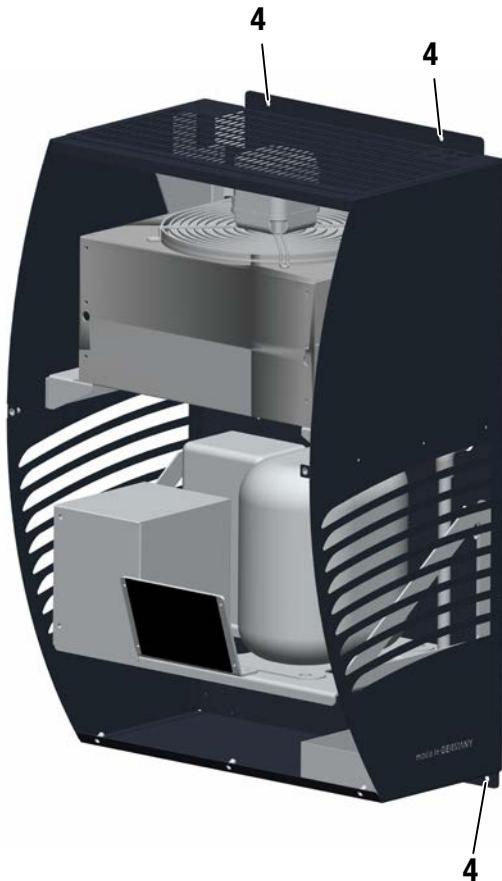**4** Fixing holes*Fig. 11: Installation, fitting the through-the-wall kit*

3. Secure the monoblock unit to the cold room by means of suitable screws inserted into the four mounting holes **4**.
4. Detach the lifting gear.
5. Carry out final tasks as described in **6.1.4** “Final tasks” (page **35**).

6.1.4 Final tasks

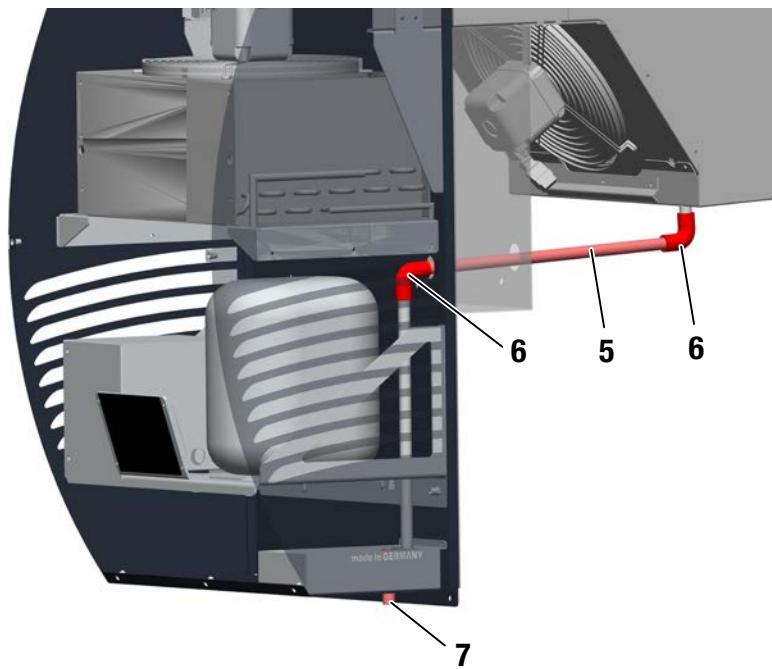

5 Drain pipe **7** Overflow pipe

6 Corner-piece

Fig. 12: Installation, mounting and drainage

1. Feed the drain pipe **5** through the hole in the monoblock unit and connect it to the corner-pieces **6**.
2. Seal the cold room by applying silicone sealant to the gap between the monoblock unit and cold room.
3. Connect the condensed water drain hose to the overflow pipe **7**.
4. Connect the compact air-conditioning unit and the cold room lamp to the power supply as shown in the wiring diagram.
5. Secure the main cover **3** with five screws.
6. Carry out function testing.

6.3

Installation of accessories

As an option, a lamp inside the cold room can be connected to the monoblock unit and operated from it.

It is not necessary to open the unit when installing the lighting system. The power supply connection has been prefitted at the factory.

The interior-lighting connection cable is on the side panel of the evaporator.

7 Operating elements



Fig. 13: Control panel

The following functions can be displayed or called up via the control panel:

- Monoblock unit on/off function
- Display and selection of nominal temperature
- Cold room lamp on/off function
- Defrost function

The control panel consists of the LED display and function keys.

7.1 LED Indicator

Symbol	Name	Operation	Meaning
	Compressor	Permanently on	<ul style="list-style-type: none">■ Compressor is activated.
		Flashing	<ul style="list-style-type: none">■ The compressor is switched on and in its startup phase.
	Defrosting	Permanently on	<ul style="list-style-type: none">■ Defrost function is active.
		Flashing	
	Fan	Permanently on	<ul style="list-style-type: none">■ Fan is on.
	Alarm	Permanently on	<ul style="list-style-type: none">■ Error message present
		Flashing	<ul style="list-style-type: none">■ Error message has been acknowledged.
AUX	AUX		


Tab. 5: LED indicator

7.2 Function keys

Symbol	Press briefly	Press and hold (> 5 s)
	<ul style="list-style-type: none"> ■ Cancellation of selected function 	<ul style="list-style-type: none"> ■ Activation of the reduced-set-point function
	<ul style="list-style-type: none"> ■ Display of current error messages ■ Access to Machine Status menu ■ Confirmation of commands 	<ul style="list-style-type: none"> ■ Access to Programming menu (password-protected)
	<ul style="list-style-type: none"> ■ Switch device on/off 	
	<ul style="list-style-type: none"> ■ Scroll through menu options ■ Increase settings 	<ul style="list-style-type: none"> ■ Activation of manual defrost function
	<ul style="list-style-type: none"> ■ Scroll through menu options ■ Reduced settings 	
	<ul style="list-style-type: none"> ■ Switch cold room lamp on/off 	

Tab. 6: Function keys

8 Commissioning

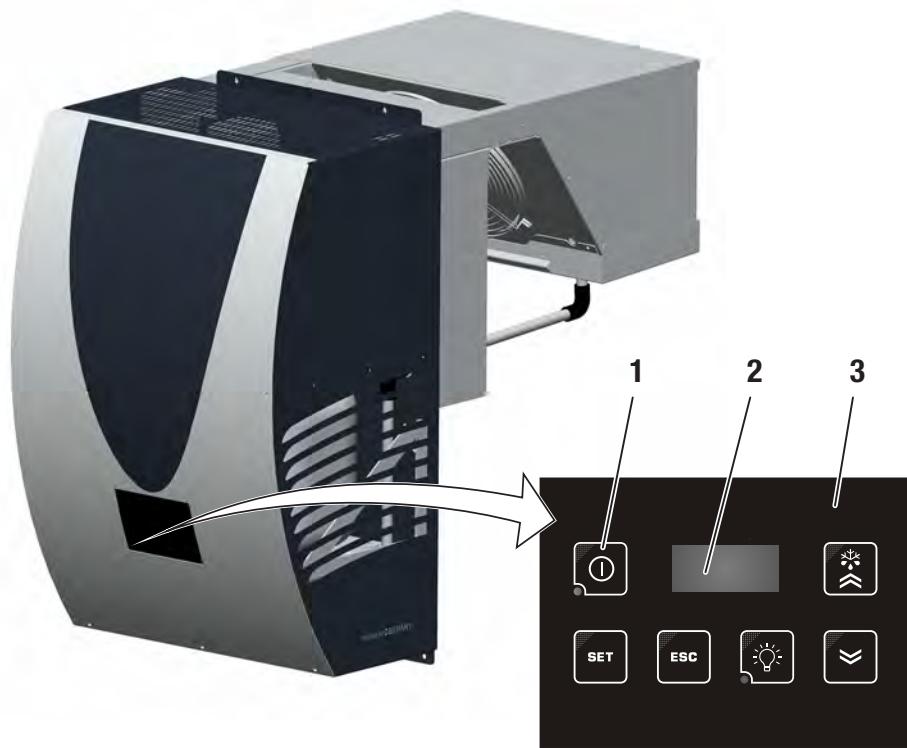

1 Function key 2 Display 3 Control panel

Fig. 14: Commissioning

**CAUTION**

Switch the monoblock unit off immediately if you detect smoke or unusual smells or noises coming from the unit.

Contact GOVI Customer Service before restarting.



1. Switch on the monoblock unit.
 - a. Press function key **1**. The LED of function key **1** lights up to indicate that operating voltage is present.
 - b. The compressor is started. The corresponding symbol on the display **2** flashes until the compressor is ready for operation.
 - c. The display **2** shows the nominal temperature.
2. Release the key lock, [see section 9.2 “Unblocking the function keys” \(page 43\)](#).
3. Set the nominal temperature, [see section 9.3 “Setting the nominal temperature” \(page 43\)](#).
4. Make sure that:
 - a. the installation opening and drill holes in the cold room wall are airtight,
 - b. the air intakes and outlets on the condenser and evaporator are not obstructed or blocked,
 - c. the main cover is securely fitted and screwed on,
 - d. the condensation water drain hose is properly connected to the overflow pipe,
 - e. all screws are securely fastened and
 - f. the system is operating correctly.

9 Operation

**CAUTION**

Switch the monoblock unit off immediately if you detect smoke or unusual smells or noises coming from the unit.

Contact GOVI Customer Service before restarting.

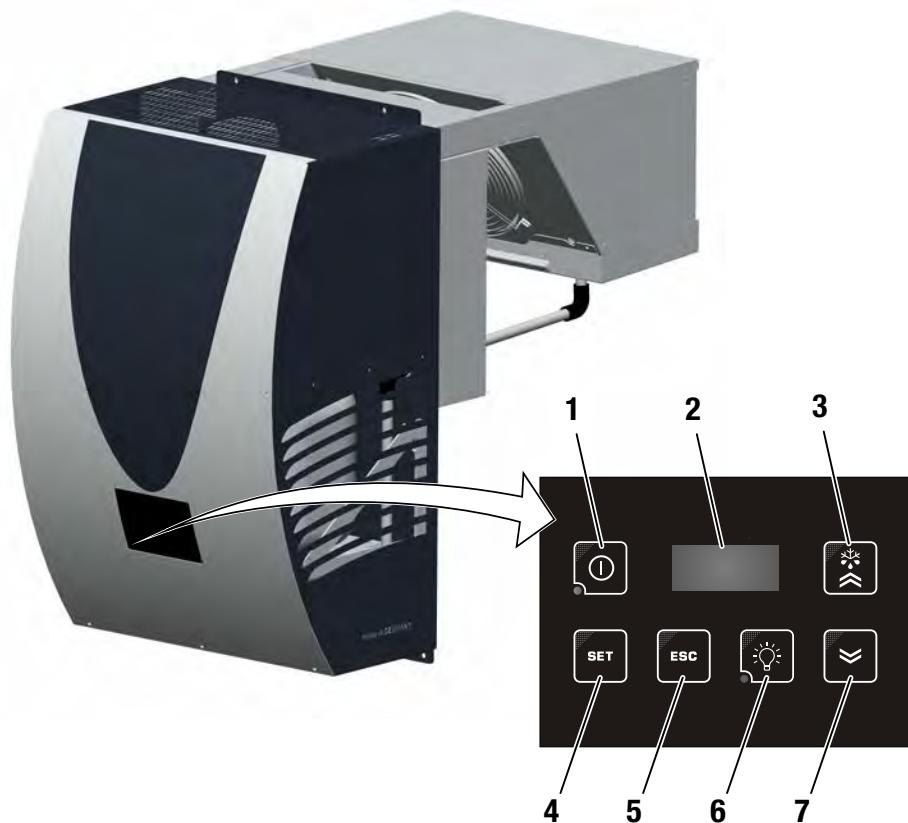


Fig. 15: Control panel

9.1 Switching the monoblock unit on and off



1. To switch on, press function key **1** until the key LED lights up.
2. To switch off, press function key **1** until the key LED goes out.

9.2 Unblocking the function keys

Push any function key on the control panel, and keep it pressed for more than **5** seconds.

9.3 Setting the nominal temperature

The monoblock unit must be switched on and the key-lock function disabled.



1. Briefly press function key **4**. "Set" will appear on display **2**
2. Press function key **4** again. The current nominal temperature will appear on display **2**.
3. To increase the nominal temperature, press function key **3**; to reduce it, press function key **7**. Each press of the button changes the nominal-temperature setting by **0.1°C**. To speed up the rate of change, keep function key **3** or **4**. This function has a slight delay
4. When the desired setting is reached, press function key **4** again to store the displayed value as a setpoint. The display **2** will now show the current temperature in the cold room.



9.4

Switching the lamp on and off

The monoblock unit must be switched on and the key-lock function disabled.



1. To switch on, press function key 6 until the key LED lights up
2. To switch off, press function key **6** until the key LED goes out.

9.5

Carrying out a manual defrost

The monoblock unit must be switched on and the key-lock function disabled.



1. Press and hold function key 3 for more than 5 seconds, or until a signal sounds. Manual defrosting is now started.

10 Maintenance



Monoblock unit

- **Carry out maintenance every six months, or**
- **after a long period of time without operation, or**
- **after operation in a dusty or damp environment.**

Failure to carry out proper maintenance can lead to malfunctioning of, and damage to, the monoblock unit.

10.1 Cleaning


10.1.1 Cleaning of components inside the cold room



WARNING

Danger of fire and explosion.

DO NOT use flammable solvents such as alcohol, benzene or thinners for cleaning.

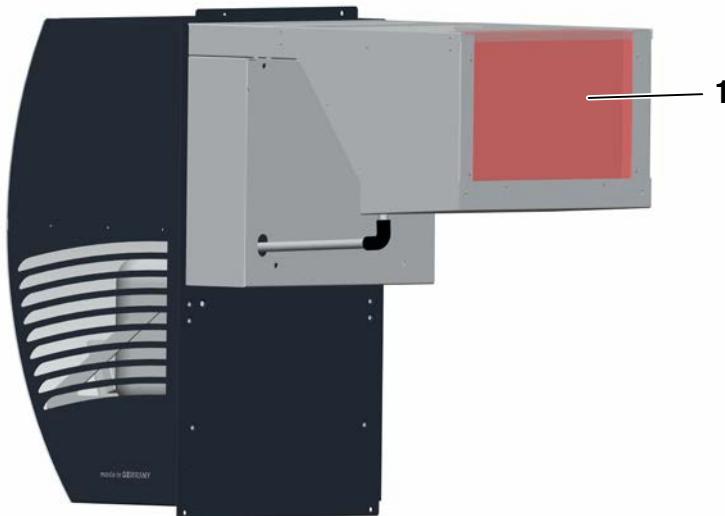


1 Evaporator

Fig. 16: Cleaning of components inside the cold room

1. Disconnect the monoblock unit from the power supply and secure it to prevent accidental reactivation.
2. Use compressed air to clean the evaporator **1**.
3. Reconnect the power supply and carry out function testing of the compact air conditioner.

10.1.2 Cleaning of external components

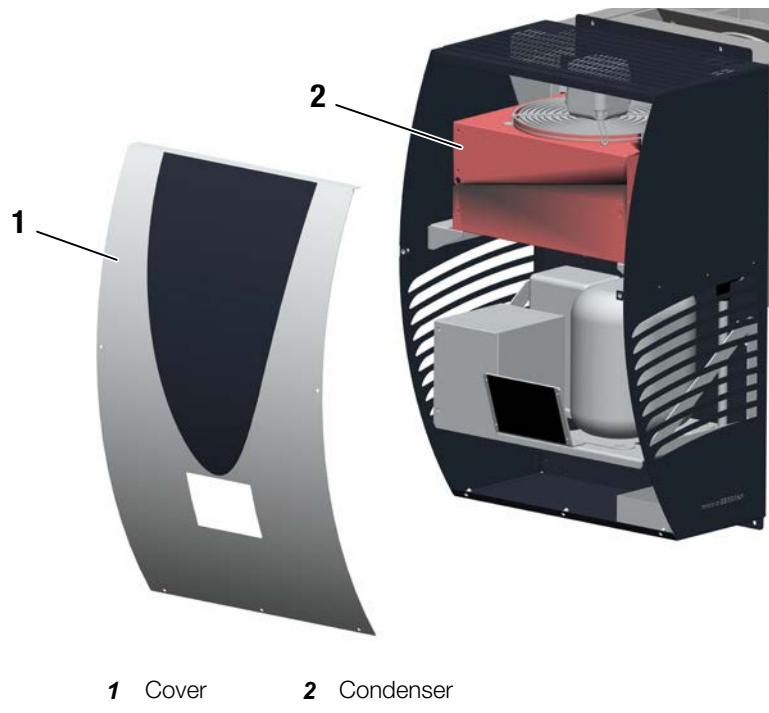

1 Cover **2** Condenser

Fig. 17: Cleaning of external components

1. Disconnect the monoblock unit from the power supply and secure it to prevent accidental reactivation.
2. Undo the five screws and remove the main cover **1**.
3. Clean the condenser **2** by blowing in compressed air through the cooling fins, working from top to bottom.
4. You may have to realign the fins on the condenser **2** after cleaning.
5. Secure the main cover **1** with five screws
6. Reconnect the power supply and carry out function testing of the compact air conditioner.

11 Faults

11.1 Troubleshooting

Error or fault	Cause	Remedy
Monoblock unit does not cool sufficiently.	Surrounding temperature too high.	<ul style="list-style-type: none">■ Check the cold room for leaks.■ Ensure adequate ventilation and air circulation in the surrounding area.
	Leaking refrigerant.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
	Condenser is blocked.	<ul style="list-style-type: none">■ Clean the condenser, see section 10.1.2 "Cleaning of external components" (page 47).
	Fans not working.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
	Air circulation blocked on the outside (condenser area) of the monoblock unit.	<ul style="list-style-type: none">■ Ensure that there is sufficient space between the monoblock unit and adjacent items.■ Remove all loose obstacles likely to obstruct air circulation.
	Insufficient air circulation inside the cold room.	<ul style="list-style-type: none">■ Check the positioning of items in the cold room.■ Position items in such a way that they do not impede air circulation.
The monoblock unit switches itself on and off automatically.	No nominal-temperature setting.	<ul style="list-style-type: none">■ Set the nominal temperature, see section 9.3 "Setting the nominal temperature" (page 43).
	Temperature sensor is defective.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.

Tab. 7: Troubleshooting

Error or fault	Cause	Remedy
	High-pressure switch is triggered.	<ul style="list-style-type: none"> ■ Contact GOVI Customer Service.
Water dripping from monoblock unit.	Drain hose blocked.	<ul style="list-style-type: none"> ■ Blow out drain hose with compressed air to remove impurities.
Ice build-up on evaporator.	Cold room door is open.	<ul style="list-style-type: none"> ■ Close cold room door.
	Evaporator fan defective.	<ul style="list-style-type: none"> ■ Contact GOVI Customer Service.
	Automatic defrost not working.	<ul style="list-style-type: none"> ■ Contact GOVI Customer Service.
Cold room lamp not working.	No power supply.	<ul style="list-style-type: none"> ■ Ensure that the monoblock unit is switched on, see section 9.1 "Switching the monoblock unit on and off" (page 43). ■ Ensure that the lamp is switched on, see section 9.4 "Turning the lamp on and off" (page 44). ■ Check functioning of cold room lamp. ■ Check lamp wiring. ■ Contact GOVI Customer Service.

Tab. 7: Troubleshooting

11.2 Error codes

Error Code	Cause	Remedy
E1	Defective temperature sensor in cooling cell.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
E2	Defective defrost-temperature sensor.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
AH1	Alarm: Temperature too high.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
AL1	Alarm: Temperature too low.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.
HPA	High-pressure switch triggered.	<ul style="list-style-type: none">■ Contact GOVI Customer Service.

Tab. 8: Error codes


12 Appendix

12.1 Wiring diagrams




The corresponding wiring diagram is also attached to the device, on the inside of the cover.

Appendix

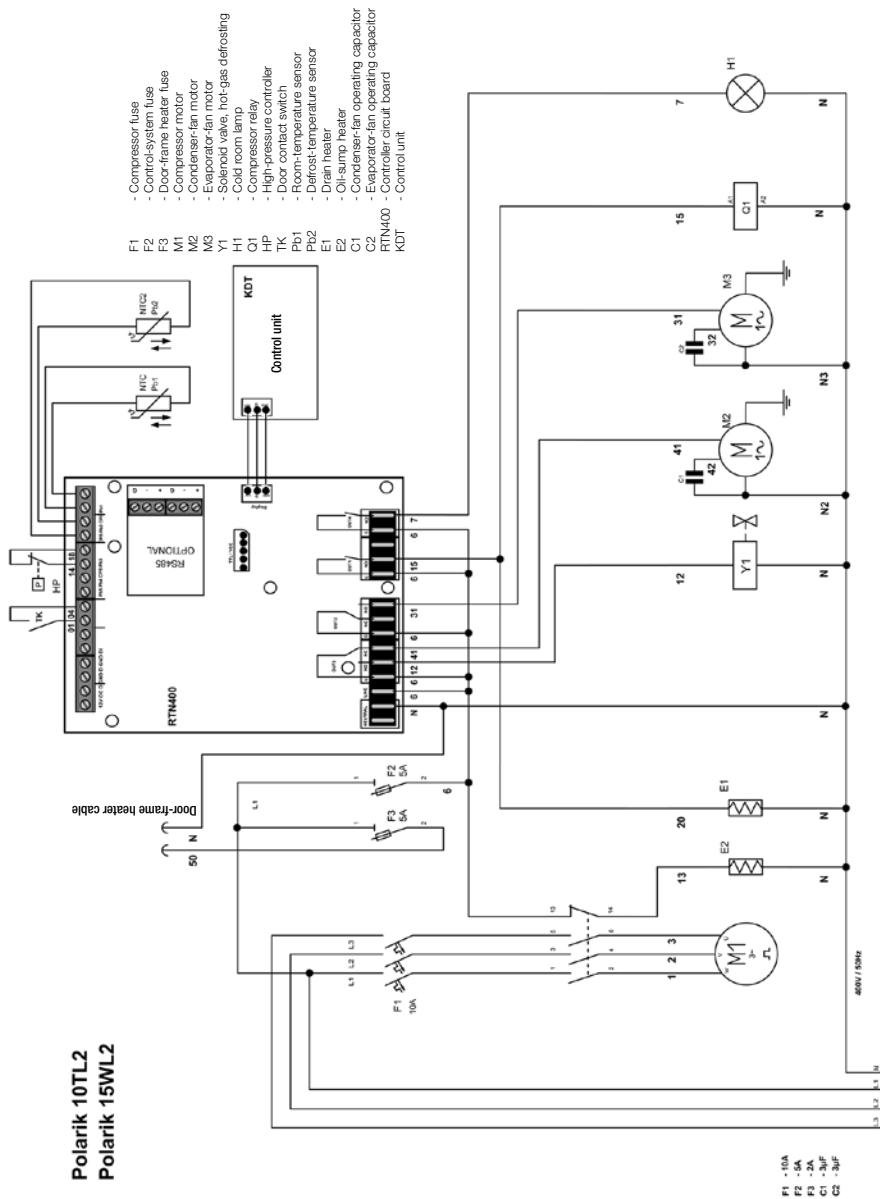


Polarik 10TL2
Polarik 15WL2


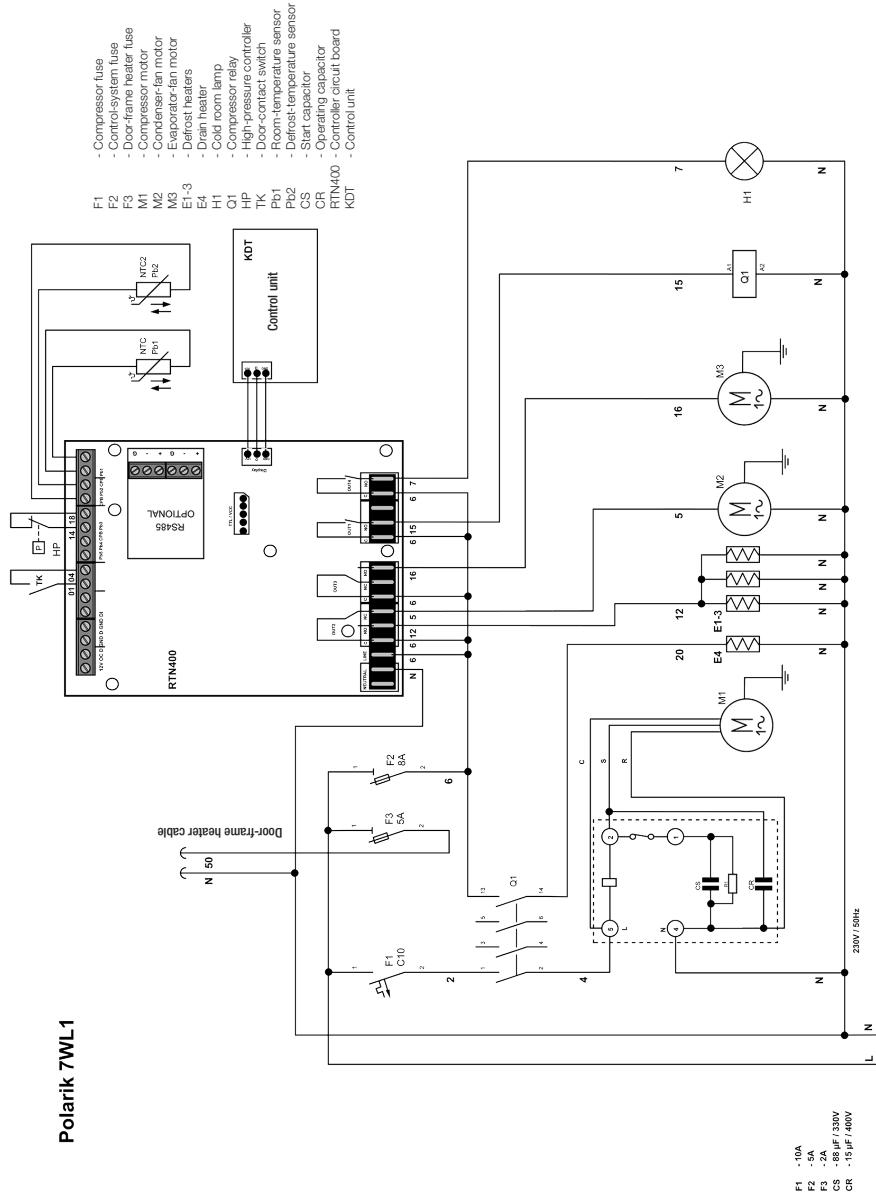
Polarik 7WL1

F1 - 10A
 F2 - 5A
 F3 - 2A
 CS - 18 µF / 330V
 CR - 15 µF / 400V

Appendix

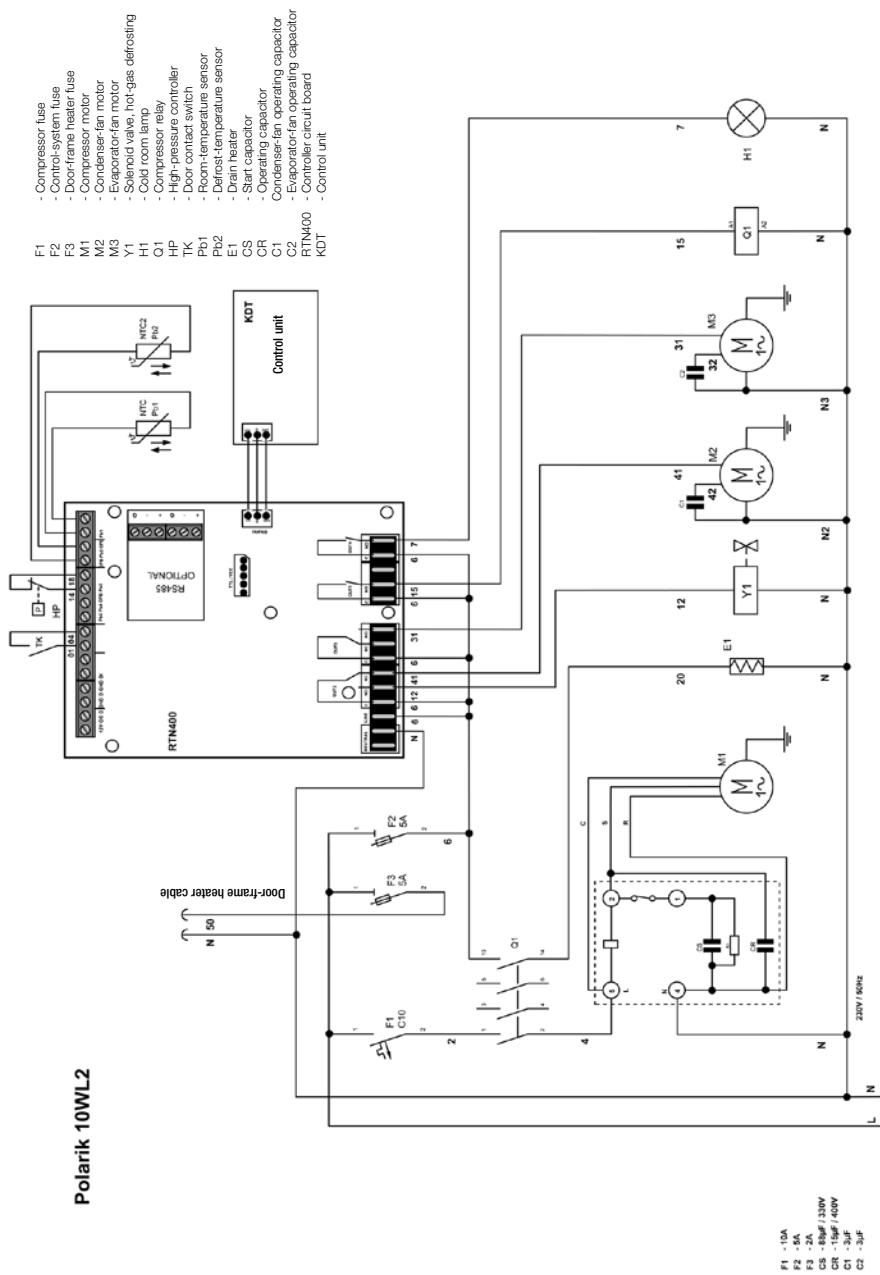


- Compressor fuse
- Control system use
- Compressor motor
- Condenser-fan motor
- Evaporator-fan motor
- Defrost heaters
- Cool room pump
- Compressor relay
- High pressure switch
- Door contact switch
- Room-temperature sensor
- Room-temperature sensor
- Start capacitor
- Operating capacitor
- Control circuit board
- Control unit

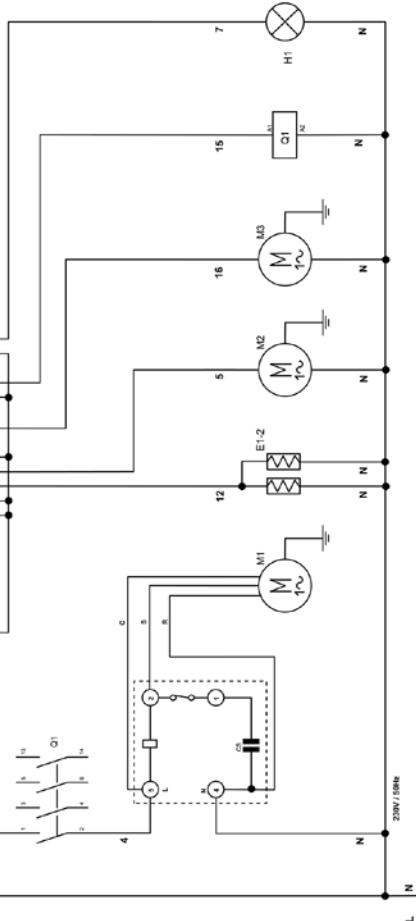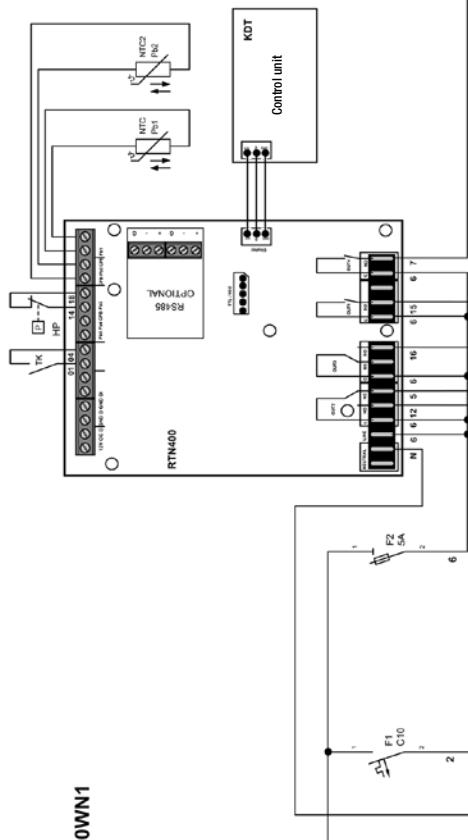


F1 = 10A

Appendix


F1	Fusible du compresseur
M1	Fusible du système de commande
M2	Moteur du compresseur
M3	Moteur du ventilateur du condenseur
M4	Moteur du ventilateur de l'évaporateur
E1	Châssis de dégivrage
E2	Châssis de la chambre froide
Q1	Réglage du compresseur
TK	Pressostat haute pression
TK	Interrupteur-contacteur de porte
TK	Capteur de température "Chambre"
TK	Capteur de température "Dégivrage"
PK2	Condensateur de démarrage
CS	Condensateur de service
PTN40	Module de commande
KOT	Unité de commande

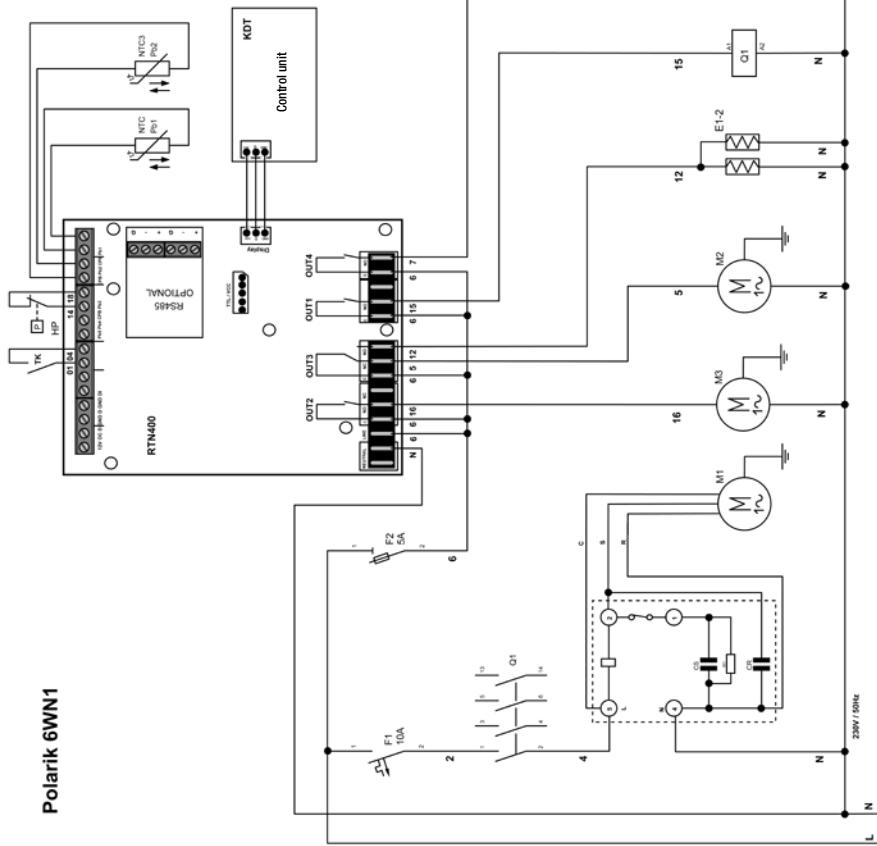


- Compressor fuse
- Control-system fuse
- Door-frame heater fuse
- M1 / M2.2 - Condenser-fan motor 1/2
- M2.1 / M2.2 - Condenser-fan motor 1/2
- M3.1 / M3.2 - Evaporator-fan motor 1/2
- Y1 - Solenoid valve, hot-gas defrosting
- H1 - Cold room lamp
- HP - High-pressure controller
- TK - Door contact switch
- P1 - Room-temperature sensor
- P2 - Drain temperature sensor
- P1 - Drain heater
- C1.1/C1.2 - Condenser-fan operating capacitor
- C2.1/C2.2 - Evaporator-fan operating capacitor
- RTN400 - Controller circuit board
- KDT - Control unit

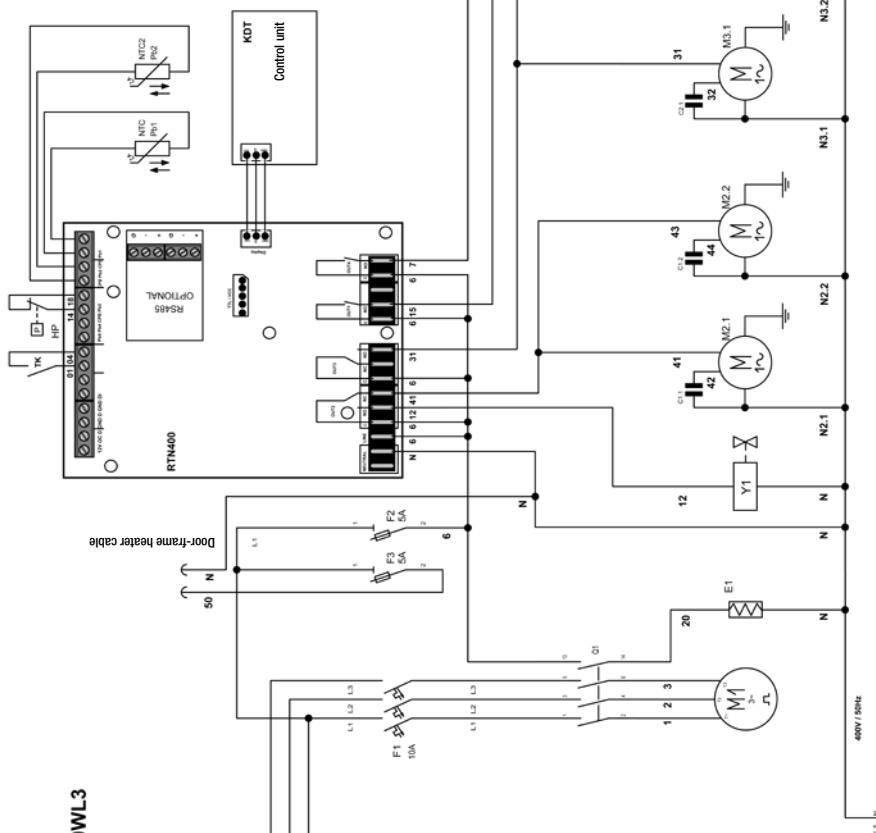

F1 - 10A
 F2 - 5A
 F3 - 2A
 C1.1 - 2uF
 C1.2 - 2uF
 C2.1 - 3uF
 C2.2 - 3uF

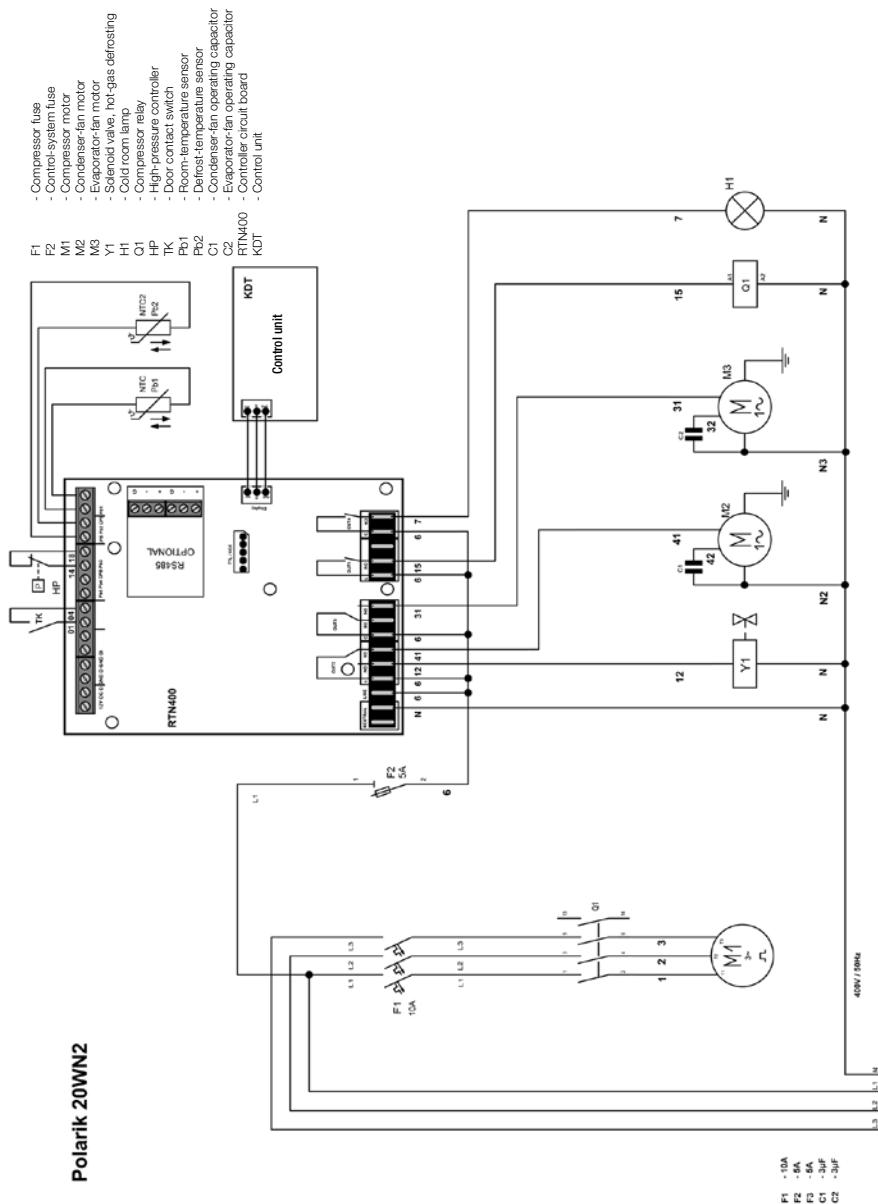

- Compressor lube
- Control-system fuse
- Condenser motor
- Condenser-fan motor 1 / 2
- Evaporatorfan motor 1 / 2
- Solenoid valve, hot-gas defrosting
- Cold room lamp
- Compressor relay
- High-pressure controller
- Door contact switch
- Room-temperature sensor
- Detach-temperature sensor
- Condenser-fan operating capacitor
- Evaporator-fan operating capacitor
- Controller circuit board
- Control unit

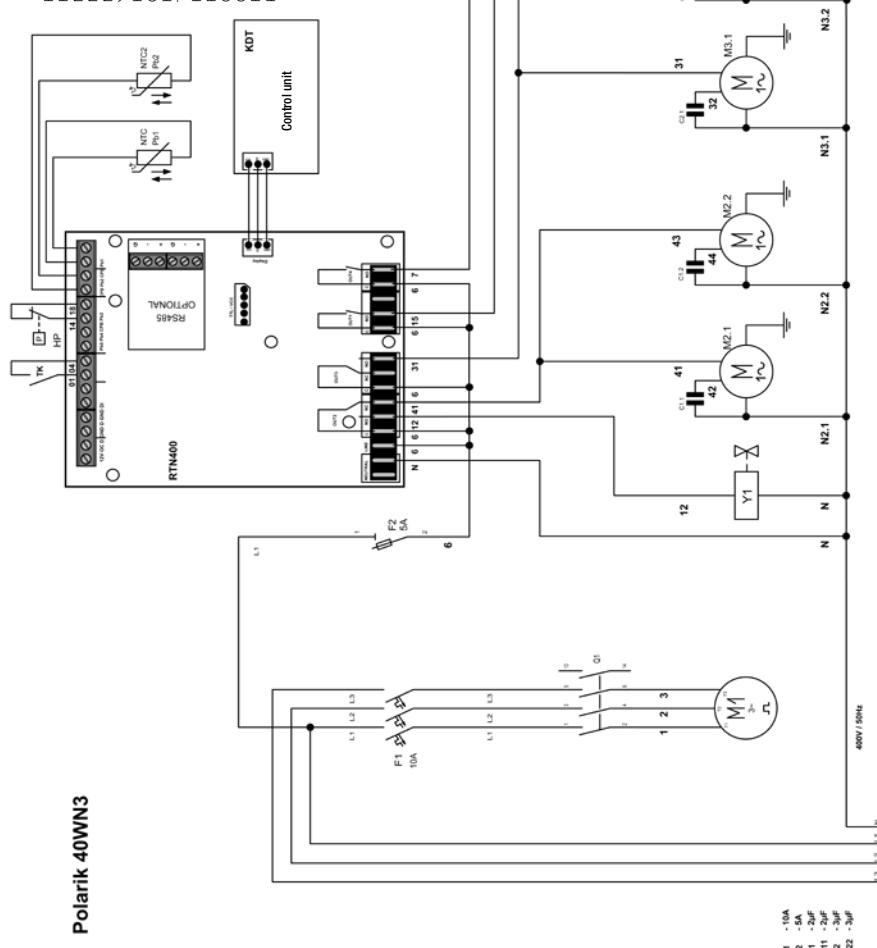



GOVI GmbH

Max-Planck-Str.5
53842 Troisdorf (Germany)
Tel.: +49(0)2241-92 29 460
e-mail: info@govi-gmbh.de

www.govi-gmbh.de